



Originalfernbedienung Ersatzfernbedienung

	Power Audio		Power
	Tv Direct		Shift + 0
	Power DVR/DVD		Red / Netflix / Search
	Power VCR		Green / APP / Repeat
	Power STB		Yellow / YouTube / Repeat
	Power Tv		Blue / Prime Video / Random
	DVR/DVD		Fav / Marker / PC
	VCR		Shift + 4
	Video		Shift + 5
	TV		Shift + 1
	DVD Multi		Guide / EPG / -/--
	FM/AM		Shift + 6
	Tv/Video		TV/Radio /
	Muting		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	Channel+		Shift + Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Channel-		Shift + Setup / OPT / Tools
	Tv Vol+		Shift + Vol+
	Tv Vol-		Shift + Vol-
	I<</Tuning-		I<< / Preset-
	Play/FM Mode		Play / Slow
	>>I/Tuning+		>>I / Preset+
	<<		<< / Tune-
	Stop/Memory		Stop / Hold
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Menu		Menu / Home
	Top Menu/STB		D.Menu / Top
	Smart Surround Setup		Sound / Title
	On		Picture / Format
	Up/TA/News/Inf		Up
	Down/PTY		Down
	Right/PTY+		Right






Originalfernbedienung Ersatzfernbedienung

	Left/PTY-		Left
	Enter		OK
	fsIRate/Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	SetUp		Setup / OPT /
	DVD/HDD/Title/Gr		Shift + 2
	Zoom/→		Zoom / Size
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	←		Back / Return
	VFP/Progressive		Smart / List
	Angle		Info / Angle
	Ex/Es/Return		Shift + Back / Return
	Cancel		Exit / Cancel / Clear
	DVD Card/Rec		Rec / Rec Mode
	Rec Pause		Shift + Pause / Step /
	Surround		Eject / Surround
	Display/Dimmer		Display / Media
	Input Analog/Digital		AV / Input / RDS
	L-Front+/Thumbn		Shift + Up
	L-Front-		Shift + Down
	Front-R+/Slide		Shift + Right
	Front-R-		Shift + Left
	Center+/3D/S		CH+ / Page+
	Center-		CH- / Page-
	Page+/Subwfr+		Shift + CH+ / Page+



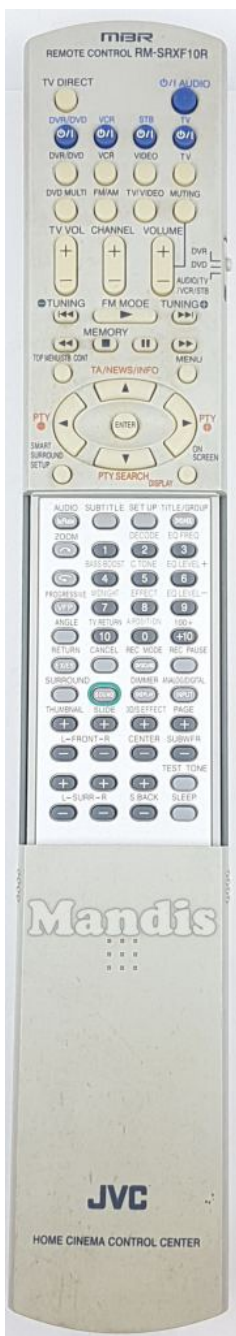

Originalfernbedienung Ersatzfernbedienung

	Page-/Subwfr-	+	Shift + CH- /
	Test Tone		Text / Goto
	Sleep		Sleep / Timer
	L-Surr+	+	Shift + Smart / List
	L-Surr-	+	Shift + Display / Media
	Surr-R+	+	Shift + TV/Radio / Program
	Surr-R-	+	Shift + AV / Input / RDS
	S.Back+	+	Shift + Picture / Format
	S.Back-	+	Shift + D.Menu / Top Menu

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power DVD		Power
	Power Audio	+	Shift + Power
	Muting		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	I<<		I<< / Preset-
	Play		Play / Slow
	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Menu		Menu / Home
	Top Menu/STB		D.Menu / Top
	On Screen		Picture / Format
	Up		Up
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	Enter		OK
	fs/Rate/Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Set Up		Setup / OPT /
	DVD/HDD/Title/Gr		Blue / Prime Video / Random
	Zoom/→		Zoom / Size
	←		Back / Return
	VFP/Progressive		Smart / List
	Angle		Info / Angle
	EX/Es/Return	+	Shift + Back / Return
	Cancel		Exit / Cancel / Clear
	DVD Card/Rec		Rec / Rec Mode
	1		1
	2		2
	3		3





Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10		Guide / EPG / -/--
	+10		Fav / Marker / PC
	Surround		Eject / Surround
	Display/Dimmer		Display / Media
	Input Analog/Digital		AV / Input / RDS
	Thumbnail		Yellow / YouTube / Repeat
	Slide		Text / Goto
	3D/S Effect		Sound / Title
	Page+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power Audio		Power
	FM/AM		TV/Radio /
	Muting		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	I<</Tuning-		I<< / Preset-
	Play/FM Mode		Play / Slow
	>>I/Tuning+		>>I / Preset+
	Stop/Memory		Stop / Hold
	Up/TA7News/Inf		Up
	Down/PTY		Down
	Right/PTY+		Right
	Left/PTY-		Left
	On		Picture / Format
	Smart Surround Setup		Smart / List
	1 FM/AM		1
	2 FM/AM		2

Originalfernbedienung Ersatzfernbedienung

	3 FM/AM		3
	4 FM/AM		4
	5 FM/AM		5
	6 FM/AM		6
	7 FM/AM		7
	8 FM/AM		8
	9 FM/AM		9
	10 FM/AM		0
	+10 FM/AM		Fav / Marker / PC
	EX/ES/Return		Back / Return
	Display/Dimmer		Display / Media
	Decode		Shift + 2
	EQ Freq		Shift + 3
	Bass Boost		Shift + 4
	C.Tone		Shift + 5
	EQ Level+		Shift + 6
	Midnight		Shift + 7





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
Effect	+ Shift + 8
EQ Level-	+ Shift + 9
A.Position	+ Shift + 0

Originalfernbedienung Ersatzfernbedienung

