



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Setup		Setup / OPT /
	3D		Picture / Format
	Zoom		Zoom / Size
	Book Mark		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9







 


 



Originalfernbedienung Ersatzfernbedienung

	0		0
	Mode		Text / Goto
	Clear		Exit / Cancel / Clear
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Top Menu		D.Menu / Top
	Menu		Menu / Home
	Return		Back / Return
	Display		Display / Media
	Up		Up
	Down		Down
	Left		Left





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Enter		OK
	Step	 + 	Shift + Pause / Step /
	Audio	 	Audio / Lang I/II
	Subtitle	 	Subtitle / EQ
	Angle	 	Info / Angle

Originalfernbedienung Ersatzfernbedienung

