
 


 


 

























 





 

























 



Originalfernbedienung Ersatzfernbedienung

Update	 + 	Shift + Red / Netflix /
Browse		Smart / List
Reveal	 + 	Shift + Green / APP /
Rotate Text		Setup / OPT /
Off/Tim		Pause / Step / Freeze
On/Tim		Play / Slow
Audio-	 + 	Shift + Vol-
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--
0/10		0
2.Fav P/C 2.		Fav / Marker / PC
Red		Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
3		3
Audio+	 + 	Shift + Vol+
Tone-		<< / Tune-
Mix Scan	 + 	Shift + Text /
Color+ P.Std		Picture / Format
Contrast+		>>  / Preset+
Color- S.Std		Sound / Title
Contrast-		<< / Preset-
Surround		Eject / Surround
Nicam/Mono	 + 	Shift + Audio / Lang I/II
Level L	 + 	Shift + Left
Level R/Woofers	 + 	Shift + Right
Display		Display / Media
Mute		Mute / Dimmer



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Txt Stop	 Stop / Hold	Back	 Back / Return
Info	 Info / Angle	Volume+	 Vol+
Subt.List	 Subtitle / EQ	Chan.Up	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Return TV	 TV/Radio /	Menu audio	 Audio / Lang I/II
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-
Text	 Text / Goto	1	 1
Txt Expand	 Zoom / Size	2	 2
TV/AV	 AV / Input / RDS		
Menu	 Menu / Home		
Menu Up	 Up		
On/Off	 Power		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		
Menu Off	 Exit / Cancel / Clear		
Menu Down	 Down		

