



**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	USB/Card		Shift + 8
	Open/Close		Eject / Surround
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Search		Red / Netflix / Search
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Clear		Exit / Cancel / Clear
	0/10		0

**Originalfernbedienung    Ersatzfernbedienung**

	Menu		Menu / Home
	Setup		Setup / OPT /
	Display		Display / Media
	Title		Sound / Title
	Left		Left
	Up		Up
	Right		Right
	Enter		OK
	Down		Down
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Step		Pause / Step / Freeze
	Stop		Stop / Hold
	Play/Pause		Play / Slow
	Vol+		Vol+



