













 









 







 



















 







 

 









Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Mute		Mute / Dimmer
	P/I		Exit / Cancel / Clear
	Setup		Setup / OPT /
	Angle		Info / Angle
	Random		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide / EPG / -/-

Originalfernbedienung Ersatzfernbedienung

	Language		Audio / Lang I/II
	Display		Display / Media
	Title		Sound / Title
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Search		Red / Netflix / Search
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Zoom		Zoom / Size
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Play		Play / Slow
	Vol+		Vol+




Originalfernbedienung Ersatzfernbedienung

	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Vol-		Vol-
	<<		<< / Tune-
	>>		>> / Tune+
	Resume		Picture / Format
	Subtitle		Subtitle / EQ
	Slow	+	Shift + Play /
	Program		TV/Radio /
	Vocal-Assist		Smart / List
	PBC		Back / Return

Originalfernbedienung Ersatzfernbedienung

