 

 







 

 


 
 


 


















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|-----------------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | Display |  | Display / Media |
|  | Time |  | Sleep / Timer |
|  | Sub-T |  | Subtitle / EQ |
|  | Movie |  | Red / Netflix / Search |
|  | Music |  | Sound / Title |
|  | Photo |  | Yellow / YouTube / Repeat |
|  | File |  | Blue / Prime Video / Random |
|  | Setup |  | D.Menu / Top |
|  | Home |  | Shift + Menu / |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | I<< |  | I<< / Preset- |
|  | >>I |  | >>I / Preset+ |
|  | Menu |  | Menu / Home |
|  | Stop |  | Stop / Hold |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|----------------------|
|  | Play |  | Play / Slow |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Left |  | Left |
|  | Right |  | Right |
|  | OK |  | OK |
|  | S-Time |  | Setup / OPT / |
|  | Repeat |  | Green / APP / Repeat |
|  | S-Mode |  | Guide / EPG / -/- |
|  | M-Slide |  | AV / Input / RDS |
|  | Zoom |  | Zoom / Size |
|  | Audio |  | Audio / Lang I/II |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |

