









 

 
 
 
 


 
 


 
 





Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 E-Zoom+	 + / Play
 E-Zoom-	 - / Stop
 Menu	 Menu
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 Enter
 Esc	 Shift + Power
 0	 Shift + 3D / Invert
 Auto	 Auto
 S-Video 1	 Shift + Video Comp / Video
 1	 Shift + Vol + / Page +
 Video 2	 Comp / Video
 2	 Shift + + / Play
 Aspect 3	 Volt / Focus

Originalfernbedienung	Ersatzfernbedienung
 Aspect 3	 Shift + Mode
 Comp 1	 Shift + Left
 4	 Shift + Vol - / Page -
 5	 Shift + - / Stop
 Comp 2	 Shift + Right
 6	 Shift + Help / Info
 Color Mode 6	 Mode
 7	 Eco / Aspect
 8	 3D / Invert
 A/V Mute 8	 Shift + Menu
 9	 Blank / Mute
 Freeze 9	 Freeze / Timer
 Source/Search	 Source
 ID	 Shift + Up
 Help ?/Help	 Help / Info
 Vol-	 Vol - / Page -
 Vol+	 Vol + / Page +

