



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/Radio		TV/Radio /
	Video		Shift + 4
	i		Info / Angle
	L/R		Picture / Format
	Play/Pause		Play / Slow

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Vol+		Vol+
	OK		OK
	Vol-		Vol-
	CH+		CH+ / Page+
	Green		Green / APP / Repeat
	Audio		Audio / Lang I/II
	CH-		CH- / Page-
	Blue		Blue / Prime Video / Random
	TTX		Text / Goto
	Red		Red / Netflix / Search
	EPG		Guide / EPG / -/-





Originalfernbedienung    Ersatzfernbedienung

	FAV		Fav / Marker / PC
	Yellow		Yellow / YouTube / Repeat
	Subtitle		Subtitle / EQ

Originalfernbedienung    Ersatzfernbedienung


