




















Originalfernbedienung Ersatzfernbedienung

Lang./Rewind		<< / Tune-
TV		TV/Radio /
Epg	 + 	Shift + Guide / EPG / -/-
Browse		Smart / List
TV/SAT		AV / Input / RDS
Lang./Rewind		Sound / Title
Red		Red / Netflix / Search
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote		Guide / EPG / -/-

Originalfernbedienung Ersatzfernbedienung

0/10		0
FAV Pref.		Fav / Marker / PC
CH/Page-		CH- / Page-
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Dev		>>  / Preset+
Freeze	 + 	Shift + Pause / Step /
Dec/Pause		Pause / Step / Freeze
East		Rec / Rec Mode
H/V Play		Play / Slow
LNB F.Forward		>> / Tune+
Menu		Menu / Home
Mute		Mute / Dimmer
Opt?		Setup / OPT /
App	 + 	Shift + Green / APP /
Info		Info / Angle



Originalfernbedienung   Ersatzfernbedienung   Originalfernbedienung   Ersatzfernbedienung

Subt.List		Subtitle / EQ		
Sleep Timer		Sleep / Timer		
Video	 + 	Shift + 4		
Text		Text / Goto		
Zoom		Zoom / Size		
PWR On/Off		Power		
Menu Up		Up		
Menu Left		Left		
OK Enter		OK		
Menu Right		Right		
Exit		Exit / Cancel / Clear		
Menu Down		Down		
Back		Back / Return		
Volume+		Vol+		
CH/Page+		CH+ / Page+		
Volume-		Vol-		
Audio		Audio / Lang I/II		

