










 

 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display		Display / Media
	Play/Pause iPod		Shift + Play /
	Play/Pause iPod		Play / Slow
	Play/Pause USB		8
	Play/Pause CD		3
	Tuner/PC/Audio In		Smart / List
	CD/USB		AV / Input / RDS
	Menu/Cancel		Menu / Home
	Up		Up
	Down		Down
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Set		OK
	Stop/PTY		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	Program		TV/Radio /
	Random		Blue / Prime Video / Random
	Repeat/Tuner		Green / APP / Repeat
	Clock/Timer		Shift + Sleep / Timer
	APS		Shift + Smart / List
	Sleep		Sleep / Timer
	Muting		Mute / Dimmer
	Sound Turbo		Audio / Lang I/II
	HBS		CH- / Page-
	Sound Mode		Sound / Title
	Surround		Eject / Surround
	Resume		D.Menu / Top
	Dimmer		Shift + Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-

