 

 


































**Originalfernbedienung Ersatzfernbedienung**

	On		Power
	Off		Shift + Power
	N		Smart / List
	R		Display / Media
	[ + ]		Info / Angle
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	■		OK
	Pos/Size		Shift + Zoom /
	[ ]/Picture		Picture / Format
	J/Sound		Sound / Title
	Set Up		Setup / OPT /
	Input 1		Red / Netflix / Search
	Input 2		Green / APP / Repeat
	Input 3		Yellow / YouTube / Repeat

**Originalfernbedienung Ersatzfernbedienung**

	PC		Fav / Marker / PC
	Input		AV / Input / RDS
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





**Originalfernbedienung    Ersatzfernbedienung**


















	C/ID Set	+	Shift + Setup / OPT / Tools
	-/--/ID All		Guide / EPG / -/--
	[+]/Aspect	+	Shift + Picture / Format
	Surround		Eject / Surround
	Off Timer		Exit / Cancel / Clear
	Multi PIP		D.Menu / Top
	Swap		Back / Return
	Select	+	Shift + OK
	Zoom/Movie		Zoom / Size

**Originalfernbedienung    Ersatzfernbedienung**





















**Originalfernbedienung Ersatzfernbedienung**

On		Power
N		Smart / List
R		Display / Media
[ + ]		Info / Angle
Off		Shift + Power
■		OK
Up		Up
Down		Down
Right		Right
Left		Left
Input 1		Red / Netflix / Search
Input 2		Green / APP / Repeat
Input 3		Yellow / YouTube / Repeat
PC		Fav / Marker / PC
Input		AV / Input / RDS
Mute		Mute / Dimmer
CH+		CH+ / Page+

**Originalfernbedienung Ersatzfernbedienung**

CH-		CH- / Page-
Vol+		Vol+
Vol-		Vol-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
[ ]/Picture		Picture / Format
J/Sound		Sound / Title
Set Up		Setup / OPT /
Pos Size		Text / Goto





Originalfernbedienung Ersatzfernbedienung

[+]/Aspect	 + 	Shift + Picture / Format
Surround		Eject / Surround
Off Timer		Exit / Cancel / Clear
Multi PIP		Zoom / Size
Swap		Back / Return
Zoom/Movie		TV/Radio /

Originalfernbedienung Ersatzfernbedienung