















 






























Originalfernbedienung Ersatzfernbedienung

Index / Text Subcode		D.Menu / Top
TV Moni		Smart / List
Zero Return		Green / APP / Repeat
00:00:00		Red / Netflix / Search
Pause / > <		Pause / Step / Freeze
0 / AV		AV / Input / RDS
0 / AV		0
Trk+		CH+ / Page+
Trk-		CH- / Page-
Left / <<		Left
Left / <<<		<<< / Tune-
Right / >>>		>>> / Tune+
Right / >>		Right
Down / Stop		Stop / Hold
Down / Stop		Down
Enter / Text Hold	 + 	Shift + Stop /
Cancel / Text Size		Zoom / Size

Originalfernbedienung Ersatzfernbedienung

Cancel / Text Size		Exit / Cancel / Clear
ATR / Text Reveal		Display / Media
Enter / Text Hold		OK
Up / Play		Play / Slow
Timer Rec	 + 	Shift + Sleep / Timer
Rec / OTR		Rec / Rec Mode
Up / Play		Up
Menu		Menu / Home
Program		TV/Radio /
Text / Mix		Text / Goto
8		8
Timer		Sleep / Timer
Eject		Eject / Surround
1		1
2		2
3		3
4		4



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
5			5
6			6
7			7
Power			Power
9			9
Info			Info / Angle
Vol+			Vol+
Vol-			Vol-
Mute			Mute / Dimmer

