 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TUNER		Shift + 6
	Eject		Eject / Surround
	HDD		Shift + 7
	Disc		Shift + 2
	Mobile		Shift + 1
	Dimmer		Shift + Mute / Dimmer
	Sleep		Sleep / Timer
	USB		Shift + 8
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Marker		Fav / Marker / PC
	Search		Red / Netflix / Search
	Title		Sound / Title
	Zoom		Zoom / Size
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	L<<		L<< / Preset-
	>>I		>>I / Preset+
	>>		>> / Tune+
	Menu / List		Menu / Home
	Home		D.Menu / Top
	Play List		Smart / List
	Display		Display / Media
	Up / Preset+		Up
	Up / Preset+		Shift + >>I / Preset+
	Return		Back / Return
	Left / Tun-		Left
	Left / Tun-		Shift + << / Tune-

Tune-





Originalfernbedienung Ersatzfernbedienung

	Enter		OK
	Right / Tun+		Right
	Right / Tun+		Shift + >> /
	Down / Preset-		Down
	Down / Preset-		Shift +  << / Preset-
	VSM		CH+ / Page+
	Clear		Exit / Cancel / Clear
	Vol+		Vol+
	XTS Pro		CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

 





 

 

 


 














 




Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	Program		TV/Radio /
	0		0
	Smart Mix		Guide / EPG / -/--
	Timeshift		Text / Goto
	PTY		Info / Angle
	RDS		AV / Input / RDS








 








 















**Originalfernbedienung Ersatzfernbedienung**

	Tuner		Shift + 6
	Power		Power
	Open / Close		Eject / Surround
	Aux		Shift + 7
	DVD		Shift + 2
	USB		Shift + 8
	Dimmer		Shift + Mute / Dimmer
	Prog / Memo		TV/Radio /
	Audio		Audio / Lang /II
	Sound		Sound / Title
	S-Title		Subtitle / EQ
	Clear		Exit / Cancel / Clear
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Marker		Fav / Marker / PC
	Search		Red / Netflix / Search
	<< / Scan -		<< / Tune-

























 





 

**Originalfernbedienung Ersatzfernbedienung**

	I<< / Skip -		I<< / Preset-
	>>I / Skip +		>>I / Preset+
	>> / Scan +		>> / Tune+
	Title		Shift + Sound / Title
	Stop		Stop / Hold
	Play		Play / Slow
	Pause / Step		Pause / Step / Freeze
	Zoom		Zoom / Size
	Setup		Setup / OPT /
	Display		Display / Media
	Menu		Menu / Home
	Up / Preset +		Up
	Return		Back / Return
	Left / Tun. -		Left
	Enter		OK
	Right / Tun. +		Right
	Down / Preset -		Down





**Originalfernbedienung Ersatzfernbedienung**

	VSM		Smart / List
	Sleep		Sleep / Timer
	Vol +		Vol+
	XTS Pro		Text / Goto
	Mute		Mute / Dimmer
	Vol -		Vol-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	PTY / HDMI		Picture / Format
	0		0

**Originalfernbedienung Ersatzfernbedienung**

	RDS / Resol.		Info / Angle
	TV Power		Shift + Power
	TV PR +		CH+ / Page+
	TV Vol +		Shift + Vol+
	TV Input		AV / Input / RDS
	TV PR -		CH- / Page-
	TV Vol -		Shift + Vol-

