 





























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AUX		Shift + 7
	USB		Shift + 8
	Card		Shift + 4
	DVD		Shift + 2
	Tuner		Shift + 6
	Tape		Shift + 5

Originalfernbedienung Ersatzfernbedienung

	OSD/Info		Info / Angle
	Prog		TV/Radio /
	Setup		Setup / OPT /
	Menu		Menu / Home
	Audio		Audio / Lang I/II
	Title		Shift + Sound / Title
	Subtitle		Subtitle / EQ
	Timer		Shift + Sleep / Timer
	+10		Guide / EPG / -/-
	Sleep		Sleep / Timer
	Play		Play / Slow
	Clock		Back / Return
	Pause		Pause / Step / Freeze
	Enter		OK
	Up/Preset+		Up
	Down/Preset-		Down
	>>/Tun+		>> / Tune+



