 

 

 







 



 

 



 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	Radio & Input		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Clear		Exit / Cancel / Clear
	0		0
	Repeat		Shift + Green / APP /
	I<<<		I<<< / Preset-
	<<<		<<< / Tune-

 


 




 




 

 
 



 
 





 

 




Originalfernbedienung Ersatzfernbedienung

	>>>		>>> / Tune+
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Speaker Level		Subtitle / EQ
	Vol+		Vol+
	Optical		Setup / OPT /
	Sound Effect		Sound / Title
	Vol-		Vol-
	Mute		Mute / Dimmer
	Home		Menu / Home
	Music ID		Audio / Lang I/II
	Info/Display		Info / Angle
	Up/Preset Up		Up
	Left/Tuning-		Left
	Enter		OK









Originalfernbedienung Ersatzfernbedienung

 Right/Tuning+	 Right
 Down/Preset	 Down
 Back	 Back / Return
 Title/Pop Up	 Display / Media
 Disc Menu	 D.Menu / Top
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue/Mono/Stereo	 Blue / Prime Video / Random
 Marker	 Fav / Marker / PC
 Search	 Shift + Red / Netflix / Search
 Sleep	 Sleep / Timer
 Rec	 Rec / Rec Mode
 Power Tv	 Shift + Power
 Vol+ Tv	 Shift + Vol+
 PR/CH+ Tv	 CH+ / Page+
 AV Input Tv	 AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

 Vol- Tv	 Shift + Vol-
 PR/CH- Tv	 CH- / Page-

