



 







 













 











Originalfernbedienung Ersatzfernbedienung






 


 



 
	Power		Power
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	[<>]		Picture / Format
	Search		Shift + Green / APP / REPEAT
	*		Menu / Home
	Tv Guide		Guide / EPG / -/-
	List		Shift + Smart / List
	Sources		AV / Input / RDS
	Smart Tv		Smart / List
	Home		Shift + Menu / Home
	Tv/Exit		Exit / Cancel / Clear
	Red		Shift + Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Info		Info / Angle
	Options		Setup / OPT /
	Back		Back / Return
	Multiview		Display / Media
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		OK
	Vol+		Vol+
	Vol-		Vol-
	Netflix		Red / Netflix / Search
	Mute		Mute / Dimmer
	CH+		CH+ / Page+




Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
	CH- / Page-
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Subtitle / EQ
	Text / Goto

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

