





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|----------------------------|
|  | Power |  | Power |
|  | Mute/On |  | Mute / Dimmer |
|  | A |  | Shift + Red / Netflix / |
|  | B |  | Shift + Green / APP / |
|  | C |  | Shift + Yellow / YouTube / |
|  | D |  | Shift + Blue / Prime |
|  | Game |  | Display / Media |
|  | AUX |  | Shift + 7 |
|  | AUX |  | Smart / List |
|  | [i] |  | Info / Angle |
|  | TXT |  | Text / Goto |
|  | Tv/R |  | TV/Radio / |
|  | Menu |  | Menu / Home |
|  | Guide |  | Guide / EPG / -/- |
|  | Pause |  | Pause / Step / Freeze |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-----------------------------|
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | Up |  | Up |
|  | CH+ |  | CH+ / Page+ |
|  | Left |  | Left |
|  | Vol- |  | Vol- |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Vol+ |  | Vol+ |
|  | Esc |  | Exit / Cancel / Clear |
|  | Down |  | Down |
|  | CH- |  | CH- / Page- |
|  | Sound/[v] |  | Audio / Lang I/II |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | 1 |  | 1 |
|  | 2 |  | 2 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|-------|---------------|
| 3 | 3 | 3 | 3 |
| 4 | 4 | 4 | 4 |
| 5 | 5 | 5 | 5 |
| 6 | 6 | 6 | 6 |
| 7 | 7 | 7 | 7 |
| 8 | 8 | 8 | 8 |
| 9 | 9 | 9 | 9 |
| | Recall | BACK | Back / Return |
| 0 | 0 | 0 | 0 |
| | Sleep | SLEEP | Sleep / Timer |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

