









 

 



 

 

 

 

 

 



 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Timer		Sleep / Timer
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	Recall		Back / Return
	PM		Smart / List
	Info		Info / Angle

Originalfernbedienung Ersatzfernbedienung

	Input		AV / Input / RDS
	Audio		Audio / Lang I/II
	Up / CH+		CH+ / Page+
	Up / CH+		Up
	Left / Vol-		Vol-
	Left / Vol-		Left
	Menu		Menu / Home
	Right / Vol+ / Enter		Right
	Right / Vol+ / Enter		Vol+
	Right / Vol+ / Enter		OK
	[+]		>> / Tune+
	Down / CH-		CH- / Page-
	Down / CH-		Down
	=>1		>> / Preset+
	[-]		<< / Tune-
	1<=		l<< / Preset-
	Red / EPG		Red / Netflix / Search



