










 
 



 

 





**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	Preset Up		Shift + >>1 / Preset+
	AUX		Shift + 7
	Volume+		Vol+
	Preset Down		Shift + 1<< / Preset-
	Tuner/Band		Shift + 6
	Volume-		Vol-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Sleep		Sleep / Timer
	1<<<		1<<< / Preset-
	<<<		<<< / Tune-
	Stop		Stop / Hold
	>>>		>>>1 / Preset+
	>>>		>>> / Tune+
	Repeat		Green / APP / Repeat

**Originalfernbedienung Ersatzfernbedienung**

	Program/Memo		Shift + TV/Radio / Program
	< Deck		Left
	Deck >		Right
	<< Deck		Down
	Deck >>		Up
	Rec/Pause Deck		Rec / Rec Mode
	Stop Deck		Shift + Stop /
	EQ PATT.		Audio / Lang I/II
	XDSS		Subtitle / EQ
	SURR.		TV/Radio /
	OAO		Zoom / Size
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung Ersatzfernbedienung

MP3 Info	MP3 Info	ANGLE INFO	Info / Angle
[7]	7	AUX - HDD 7	7
[8]	8	USB 8	8
[9]	9	BLUETOOTH 9	9
[0]	0	HDMI - BAT 0	0

Originalfernbedienung Ersatzfernbedienung