

 
 








 

 

 

 



















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Info		Info / Angle
	0		0
	Source		AV / Input / RDS
	Home		D.Menu / Top
	Up		Up
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Netflix		Shift + Red / Netflix /
	Prime Video		Shift + Blue / Prime
	YouTube		Shift + Yellow / YouTube /
	Google Play		Shift + Green / APP /
	Vol+		Vol+
	Text / CC		Text / Goto
	P+		CH+ / Page+
	Vol-		Vol-
	Smart / List		Smart / List
	P-		CH- / Page-
	Guide		Guide / EPG / -/-





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	Subtitle		Subtitle / EQ				
	Pause		Pause / Step / Freeze				
	AD		Audio / Lang I/II				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

