



 







 











 











 





 





















 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Freeze		Pause / Step / Freeze
	Subtitle		Subtitle / EQ
	Guide		Guide / EPG / -/--
	Fav.CH		Fav / Marker / PC
	I-II		Audio / Lang I/II
	Text / Mix		Text / Goto
	Mute		Mute / Dimmer
	Sleep		Sleep / Timer
	P.Size		Setup / OPT /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	Jump		Back / Return
	0		0
	Ent		Display / Media
	Vol+		Vol+
	Info		Info / Angle
	CH+		CH+ / Page+
	Vol-		Vol-
	Input		AV / Input / RDS
	CH-		CH- / Page-
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right





Originalfernbedienung Ersatzfernbedienung

	S.Mode		Sound / Title
	Down		Down
	P.Mode		Picture / Format
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Index		Rec / Rec Mode
	Reveal		Play / Slow
	Size		Zoom / Size
	Hold		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

