






























 







Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute / Dimmer
	EPG		Guide / EPG / -/-
	Info		Info / Angle
	TTX		Text / Goto
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Menu		Menu / Home
	Up / CH+		CH+ / Page+
	Up / CH+		Up
	Exit		Exit / Cancel / Clear
	Left / Vol-		Vol-
	Left / Vol-		Left
	OK		OK
	Right / Vol+		Vol+
	Right / Vol+		Right
	Favourite		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	Down / CH-		CH- / Page-
	Down / CH-		Down
	TV/Radio		TV/Radio /
	1		1
	2		2
	3		3
	Recall		Back / Return
	4		4
	5		5
	6		6
	Goto		Shift + Text /
	7		7
	8		8
	9		9
	0		0
	Rev		<< / Tune-
	Fwd		>> / Tune+





Originalfernbedienung Ersatzfernbedienung

	Prev		I<< / Preset-
	Next		>>I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Repeat	+	Shift + Green / APP /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

