


















Originalfernbedienung Ersatzfernbedienung

PWR On/Off		Power
Mute		Mute / Dimmer
H/V Play		Play / Slow
Dec/Pause		Pause / Step / Freeze
East		Rec / Rec Mode
Lang./Rewind		<< / Tune-
LNB F.Forward		>> / Tune+
West		<< / Preset-
Dev		>>  / Preset+
Lang./Rewind		Sound / Title
Audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Zoom		Zoom / Size
Sleep Timer		Sleep / Timer
TV		TV/Radio /
Opt?		Setup / OPT /
Text		Text / Goto

Originalfernbedienung Ersatzfernbedienung

TV/SAT		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
SAT Sky		Smart / List
CH/Page+		CH+ / Page+
Volume-		Vol-
Display		Display / Media
CH/Page-		CH- / Page-
1. ?		1



