




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Red / Zoom		Red / Netflix / Search
	Red / Zoom		Zoom / Size
	Green / Aspect		Green / APP / Repeat
	Green / Aspect		Setup / OPT /
	Yellow / V-Format		Picture / Format
	Yellow / V-Format		Yellow / YouTube / Repeat
	Blue / Timer		Blue / Prime Video / Random
	Blue / Timer		Sleep / Timer
	TTX		Text / Goto
	Fav		Fav / Marker / PC
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Play		Play / Slow

Originalfernbedienung Ersatzfernbedienung

	Pause / Timeshift		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Menu		Menu / Home
	Up / CH+		Up
	Exit		Exit / Cancel / Clear
	Left / Vol-		Left
	OK		OK
	Right / Vol+		Right
	Info		Info / Angle
	Down / Ch-		Down
	EPG		Guide / EPG / -/-
	V+		Vol+
	PG+		Shift + CH+ / Page+
	P+		CH+ / Page+
	V-		Vol-
	PG-		Shift + CH- / Page-





Originalfernbedienung Ersatzfernbedienung

	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV/Radio		TV/Radio /
	0		0
	Recall		Back / Return

Originalfernbedienung Ersatzfernbedienung