




Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	OSD		Display / Media
	Standby/On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/-
	0/10		0
	Goto		Text / Goto
	Setup		Setup / OPT /
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Title		Sound / Title
	Left		Left
	Enter		OK
	Right		Right
	Zoom		Zoom / Size
	Down		Down
	Menu		Menu / Home
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Play/Pause		Play / Slow
	II>/Step		Pause / Step / Freeze
	Ran		Blue / Prime Video / Random
	I>/Slow		Picture / Format
	Vol-		Vol-




Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Angle		Info / Angle
	Video		Shift + 4
	PBC		D.Menu / Top
	Prog		TV/Radio /
	RL		CH+ / Page+
	NP		CH- / Page-
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Return		Back / Return
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

