



 

 

 

 





 



 

 










 







 














 















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	TV		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back / Return
	Exit		Exit / Cancel / Clear
	List		Smart / List
	APP		Shift + Green / APP / Repeat





Originalfernbedienung Ersatzfernbedienung

	EPG		Guide / EPG / -/--
	OPT		Setup / OPT /
	OK		OK
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Vol+		Vol+
	Vol-		Vol-
	CH/Page+		CH+ / Page+
	CH/Page-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	Sub		Subtitle / EQ





Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	i		Info / Angle

Originalfernbedienung Ersatzfernbedienung

