
 
 





 
 
 

 
 

 







 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Menu		Menu / Home
	0		0
	Guia		Guide / EPG / -/-
	Vol+		Vol+
	↑		>> / Tune+
	C+		CH+ / Page+



Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	↓		<< / Tune-
	C-		CH- / Page-
	Up		Up
	Left		Left
	OK/OPC		OK
	Right		Right
	Salir		Exit / Cancel / Clear
	Down		Down
	Info		Info / Angle
	Audio		Audio / Lang I/II
	"		Setup / OPT /
	[=]		Text / Goto
	←		Back / Return
	Red/Fav+		Red / Netflix / Search
	Green/Radio/TV		Green / APP / Repeat
	Yellow/Ayuda		Yellow / YouTube / Repeat





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
 ACCEPTAR Blue/Aceptar	 Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

