



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	AV		AV / Input / RDS
	Mute		Mute / Dimmer
	East		Rec / Rec Mode
	West		I<< / Preset-
	A.Focus		Setup / OPT /
	Q		Exit / Cancel / Clear
	Vol+		Vol+
	Up / Fav+		Up
	CH+ / Pg+		CH+ / Page+
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	CH- / Pg-		CH- / Page-
	Down / Fav-		Down
	List / Index		Smart / List

Originalfernbedienung Ersatzfernbedienung

	R		Back / Return
	Sel / View		Display / Media
	i+ / Reveal		Info / Angle
	TV Guide / Stop		Guide / EPG / -/--
	TV Guide / Stop		Stop / Hold
	TXT		Text / Goto
	Menu / Save		Menu / Home
	Zoom		Zoom / Size
	Red / Add / Audio		Red / Netflix / Search
	Green / Up date / Long		Green / APP / Repeat
	Yellow / Del / Timer		Yellow / YouTube / Repeat
	Blue / Freeze		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

6 rmo	6	TUNER 6	6
7 page	7	AUX - HDD 7	7
8 fuv	8	USB 8	8
9 wxy	9	BLUETOOTH 9	9
0 1 2 3	0	HDMI - BAT 0	0

Originalfernbedienung Ersatzfernbedienung

