
















 
 




 


 














Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------|---------------|---|------------------------|
| TIMER | Timer |  +  | Shift + Sleep / Timer |
| SLEEP | Sleep |  | Sleep / Timer |
| MONO TUNER | Mono Tuner |  | Display / Media |
| CLOCK | Clock |  | Setup / OPT / |
| CD EDIT/CHECK | CD Edit/Check |  | Smart / List |
| PRGM | PRGM |  | TV/Radio / |
| RANDOM/REPEAT | Random/Repeat |  +  | Shift + Green / APP / |
| RANDOM/REPEAT | Random/Repeat |  +  | Shift + Blue / Prime |
| 1 | 1 |  | 1 |
| 2 | 2 |  | 2 |
| 3 | 3 |  | 3 |
| DECK1/2 TAPE | Tape/Deck1/2 |  | Red / Netflix / Search |
| 4 | 4 |  | 4 |
| 5 | 5 |  | 5 |
| 6 | 6 |  | 6 |
| BAND TUNER | Tuner/Band |  | Green / APP / Repeat |
| 7 | 7 |  | 7 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------------|---|-----------------------------|
| 8 | 8 |  | 8 |
| 9 | 9 |  | 9 |
| AUX VIDEO | Video/AUX |  | Yellow / YouTube / Repeat |
| 0 | 0 |  | 0 |
| +10 | +10 |  | Guide / EPG / -/- |
| CD | CD |  | Blue / Prime Video / Random |
|  | Disc Direct Play 1 |  +  | Shift + 1 |
|  | Disc Direct Play 2 |  +  | Shift + 2 |
|  | Disc Direct Play 3 |  +  | Shift + 3 |
|  | Disc Direct Play 4 |  +  | Shift + 4 |
|  | Disc Direct Play 5 |  +  | Shift + 5 |
|  | Disc Direct Play 6 |  +  | Shift + 6 |
|  | Disc Direct Play 7 |  +  | Shift + 7 |
| SURROUND | Surround |  +  | Shift + Eject / Surround |
| MANUAL SELECT | Manual Select |  | OK |
| DOLBY PRO LOGIC | Dolby Pro Logic |  | Sound / Title |
| T-BASS | T-Bass |  | Audio / Lang I/II |







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------------------|---|-----------------------|
|  | GEQ |  | Subtitle / EQ |
|  | Karaoke |  | Info / Angle |
|  | Open/Close |  | Eject / Surround |
|  | Rec/Rec Mute |  | Rec / Rec Mode |
|  | Play / Up / |  | Play / Slow |
|  | Play / Up / |  | Shift + >>1 / Preset+ |
|  | Play / Up / |  | Up |
|  | Vol+ |  | Vol+ |
|  | Pause / Set |  | Pause / Step / Freeze |
|  | << / I<< / Left / Tuning Down |  | Left |
|  | << / I<< / Left / Tuning Down |  | << / Tune- |
|  | << / I<< / Left / Tuning Down |  | I<< / Preset- |
|  | << / I<< / Left / Tuning Down |  | Shift + << / |
|  | >> / >>I / Right / Tuning Up |  | Right |
|  | >> / >>I / Right / Tuning Up |  | >> / Tune+ |
|  | >> / >>I / Right / Tuning Up |  | >>I / Preset+ |
|  | >> / >>I / Right / Tuning Up |  | Shift + >> / |

Tune+

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------------------|---|-----------------------|
|  | Vol- |  | Vol- |
|  | Power |  | Power |
|  | Stop / Down / Clear / Preset- |  | Down |
|  | Stop / Down / Clear / Preset- |  | Stop / Hold |
|  | Stop / Down / Clear / Preset- |  | Shift + I<< / Preset- |
|  | Stop / Down / Clear / Preset- |  | Exit / Cancel / Clear |

