


**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	Open/Close		Eject / Surround
	Play Mode		Smart / List
	Timer		Sleep / Timer
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Title		Sound / Title
	Display		Display / Media
	Zoom		Zoom / Size
	Menu		Menu / Home
	Setup		Setup / OPT /
	Return		Back / Return
	Up		Up
	Left		Left
	Select		OK
	Right		Right
	Down		Down

**Originalfernbedienung Ersatzfernbedienung**

	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	<< Search		<< / Tune-
	Search >>		>> / Tune+
	Program+		CH+ / Page+
	Rec Mode		Shift + Rec / Rec Mode
	Tv/DVD		TV/Radio /
	Program-		CH- / Page-
	Record		Rec / Rec Mode
	Insert Chapter		Text / Goto
	Subtitle		Subtitle / EQ
	Video Source		AV / Input / RDS
	Audio		Audio / Lang I/II
	Angle		Info / Angle





**Originalfernbedienung Ersatzfernbedienung**

SEARCH MODE	Search Mode	NETFLIX SEARCH	Red / Netflix / Search
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
+10	+10	GUIDE EPG	Guide / EPG / -/--
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI - SAT 0	0

**Originalfernbedienung Ersatzfernbedienung**


