





 



 















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|---------------------------|
|  | Open/Close |  | Eject / Surround |
|  | Sleep |  | Sleep / Timer |
|  | Clock |  | Shift + Sleep / Timer |
|  | Power |  | Power |
|  | Internet Radio |  | Display / Media |
|  | USB |  | Shift + 8 |
|  | Music Servers |  | Audio / Lang I/II |
|  | Tuner |  | Shift + 6 |
|  | Analog In |  | AV / Input / RDS |
|  | Optical In |  | D.Menu / Top |
|  | CD |  | Shift + 3 |
|  | Bluetooth |  | Shift + 9 |
|  | I<</CH- |  | I<< / Preset- |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | >>I/CH+ |  | >>I / Preset+ |
|  | Speaker A/B |  | Yellow / YouTube / Repeat |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|------------------------|
|  | Stop |  | Stop / Hold |
|  | Volume A/B |  | Red / Netflix / Search |
|  | ADD Favorites |  | CH+ / Page+ |
|  | DBB/Tone |  | Subtitle / EQ |
|  | Volume+ |  | Vol+ |
|  | Call Favorites |  | CH- / Page- |
|  | Mute |  | Mute / Dimmer |
|  | Volume- |  | Vol- |
|  | Queue |  | Smart / List |
|  | Up/Tune+ |  | Up |
|  | Option/Program |  | Setup / OPT / |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Back |  | Back / Return |
|  | Down/Tune- |  | Down |
|  | Setup |  | Menu / Home |



