
















 



















 





 

 



















Originalfernbedienung Ersatzfernbedienung


	Power		Power
	Energy Saving		Sleep / Timer
	AV Mode		Picture / Format
	Input		AV / Input / RDS
	Tv/Rad		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.Vlew		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	FAV/Mark/Char/Nu		Fav / Marker / PC
	P+		CH+ / Page+
	Vol-		Vol-
	3D		Zoom / Size
	Mute/Delete		Mute / Dimmer
	P-		CH- / Page-
	Menu		Menu / Home
	NetCast		Sound / Title
	Q.Menu		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Back		Back / Return




Originalfernbedienung Ersatzfernbedienung

 GUIDE	Guide	 GUIDE EPG	Guide / EPG / -/--
 Red	Red	 NETFLIX SEARCH	Red / Netflix / Search
 Green	Green	 APP REPEAT	Green / APP / Repeat
 Yellow	Yellow	 YouTube REPEAT A-B	Yellow / YouTube / Repeat
 L/R SELECT	Blue/L/R/Select	 Prime Video RANDOM	Blue / Prime Video / Random
 TEXT	Text	 GOTO TEXT	Text / Goto
 T.OPT	T.Opt	 SHIFT + OPT-TOOLS SETUP	Shift + Setup / OPT / Tools
 SUBTITLE	Subtitle	 EQ SUBTITLE	Subtitle / EQ
 Stop	Stop	 HOLD	Stop / Hold
 Play	Play	 SLOW	Play / Slow
 Pause	Pause	 STEP - FREEZE	Pause / Step / Freeze
 <<<	<<<	 TUNE-	<<< / Tune-
 >>>	>>>	 TUNE+	>>> / Tune+
 Simplink	Simplink	 MEDIA DISPLAY	Display / Media
 INFO	Info	 ANGLE INFO	Info / Angle
 AD	AD	 LANG I/II AUDIO	Audio / Lang I/II
 APP/*	APP/*	 SHIFT + APP REPEAT	Shift + Green / APP / Repeat

Originalfernbedienung Ersatzfernbedienung

