



Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Power OFF		Shift + Power
	Power On		Power
	Disc		Shift + 1
	Tuner		Shift + 6
	USB1/iPod		Shift + 8
	AUX		Shift + 7
	1		1
	2		2
	3		3
	Rand		Shift + Blue / Prime
	4		4
	5		5
	6		6
	Repeat		Shift + Green / APP /
	7		7
	8		8








 




 




 

Originalfernbedienung Ersatzfernbedienung

	9		9
	A-B		Shift + Yellow / YouTube /
	0		0
	SRCH		Shift + Red / Netflix /
	Clear		Exit / Cancel / Clear
	CH+		CH+ / Page+
	Mute		Mute / Dimmer
	Vol+		Vol+
	CH-		CH- / Page-
	Setup		Setup / OPT /
	Vol-		Vol-
	Top Menu		Shift + D.Menu / Top Menu
	Up		Up
	Menu/Pop Up		D.Menu / Top
	Left		Left
	Enter		OK
	Right		Right


 














 







Originalfernbedienung Ersatzfernbedienung

	Home		Menu / Home
	Down		Down
	Return		Back / Return
	<</Tuning-		<< / Tune-
	Play		Play / Slow
	>>/Tuning+		>> / Tune+
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>>I		>>I / Preset+
	RDS/Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Pic In Pic		Picture / Format
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue / Prime Video / Random
	S.Direct		TV/Radio /
	SDB Tone		Fav / Marker / PC
	Dolby		Guide / EPG / -/-
	Stereo		Sound / Title
	Display		Display / Media
	Dimmer		Shift + Mute / Dimmer
	Clock		Shift + Sleep / Timer
	Power Tv		Shift + OK
	Input Tv		AV / Input / RDS
	Remote/Browse		Smart / List
	Play/Pause		Shift + Play /

