









 












 













Originalfernbedienung Ersatzfernbedienung

	TV/R		TV/Radio /
	On/Off		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Menu		Menu / Home
	0		0
	Text		Text / Goto
	Vol-		Vol-
	P+		CH+ / Page+
	Vol+		Vol+











Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	P-		CH- / Page-
	i		Info / Angle
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	EPG		Guide / EPG / -/-
	Up		Up
	Media		Display / Media
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Portal		Smart / List
	<<		<< / Tune-





Originalfernbedienung    Ersatzfernbedienung

	Play		Play / Slow
	>>		>> / Tune+
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Stop		Stop / Hold

Originalfernbedienung    Ersatzfernbedienung