







 



 
 
 



 

 



 







 





Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 Mute	 Mute / Dimmer
 CD/AUX	 Shift + 3
 USB	 Shift + 8
 FM/DAB	 Shift + 6
 BT/Pair	 Shift + 1
 Info	 Info / Angle
 Intro	 OK
 Repeat	 Green / APP / Repeat
 Shuffle	 Blue / Prime Video / Random
 Stop/Mono Stereo	 Stop / Hold
 Open/Close	 Eject / Surround
 Vol+	 Vol+
 I<<	 I<< / Preset-
 Play	 Play / Slow
 Pause/Scan	 Pause / Step / Freeze
 >>I	 >>I / Preset+

Originalfernbedienung	Ersatzfernbedienung
 Album Preset ▼	 CH- / Page-
 Vol-	 Vol-
 Album Preset ▲	 CH+ / Page+
 1	 1
 2	 2
 3	 3
 EQ	 Subtitle / EQ
 4	 4
 5	 5
 6	 6
 Bass	 Audio / Lang I/II
 7	 7
 8	 8
 9	 9
 Sleep/Timer	 Sleep / Timer
 Dimmer	 Shift + Mute / Dimmer
 0	 0





Originalfernbedienung    Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
	Prog
	Clock
	TV/Radio /
	Shift + Sleep / Timer

Originalfernbedienung    Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

