 
 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Off		Shift + Power
	On		Power
	HDMI		Shift + 0
	Zone A		Sound / Title
	Zone B		Audio / Lang I/II
	A/D		Red / Netflix / Search
	ATT		Green / APP / Repeat
	SPKR A-B		Yellow / YouTube / Repeat
	7.1		Blue / Prime Video / Random
	TV		Shift + 1
	DVD		Shift + 2
	VCR		Shift + 4
	DSS		Shift + 9
	Tune		Shift + 6
	CD		Shift + 3
	CDR		Shift + Fav / Marker / PC
	Tape		Shift + 5

Originalfernbedienung Ersatzfernbedienung

	AUX1		Shift + 7
	AUX2		Shift + 8
	Input Up		CH+ / Page+
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Volume+		Vol+
	Input Down		CH- / Page-
	Display		Display / Media
	Surr		Eject / Surround
	Volume-		Vol-
	Top		Smart / List
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home



[illegible]

The remote control is black with a variety of buttons. At the top, there is a red power button, a black dimmer/mute button, and a yellow shift button. Below these are four blue buttons: TV, DVD, SAT, and AUX. The next row contains buttons for SLOW, STEP-FREEZE, HOLD, and REC MODE. The following row has play, pause, stop, and a red record button. The next row includes tune-, tune+, preset-, and preset+ buttons. The following row has left and right arrow buttons, a double left arrow, and a double right arrow. The next row includes title, lang, eq, and surround buttons. The following row has sound, audio, subtitle, and a volume up button. The next row includes format, size, timer, and program buttons. The following row has picture, zoom, sleep, and TV/radio buttons. The next row includes top menu, opt-tools, goto, and rds buttons. The following row has d.menu, setup, text, and av input buttons. Below this is a row with home, menu, and angle buttons. The next row has a central navigation pad with an OK button and four directional arrows. The following row has clear, exit, cancel, list, smart, media, display, return, and back buttons. The next row has a large volume up/down button, a list button, and a large channel up/down button. The following row has TV, DVD, and CD-DB buttons. The next row has a numeric keypad from 1 to 9, with video, tape, and tuner buttons above them. The following row has aux-hdd, usb, and bluetooth buttons. The next row has a double left arrow, hddi-sat, and pc buttons. The following row has guide/epg, 0, and fav marker buttons. The next row has a row of four colored buttons: Netflix, App, YouTube, and Prime Video. The final row has search, repeat, repeat a-b, and random buttons. At the bottom, there is a logo for 'Mandis shop' and the website 'www.mandis.tv'.





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Volume+		Vol+
	Display		Display / Media
	Volume-		Vol-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Memo		Smart / List
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	I<<		I<< / Preset-

Originalfernbedienung Ersatzfernbedienung

	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	1		1
	2		2
	3		3
	Repeat		Green / APP / Repeat
	4		4
	5		5
	6		6
	Random		Blue / Prime Video / Random
	7		7
	8		8
	9		9
	CL		Exit / Cancel / Clear
	0		0
	+10		Guide / EPG / -/-



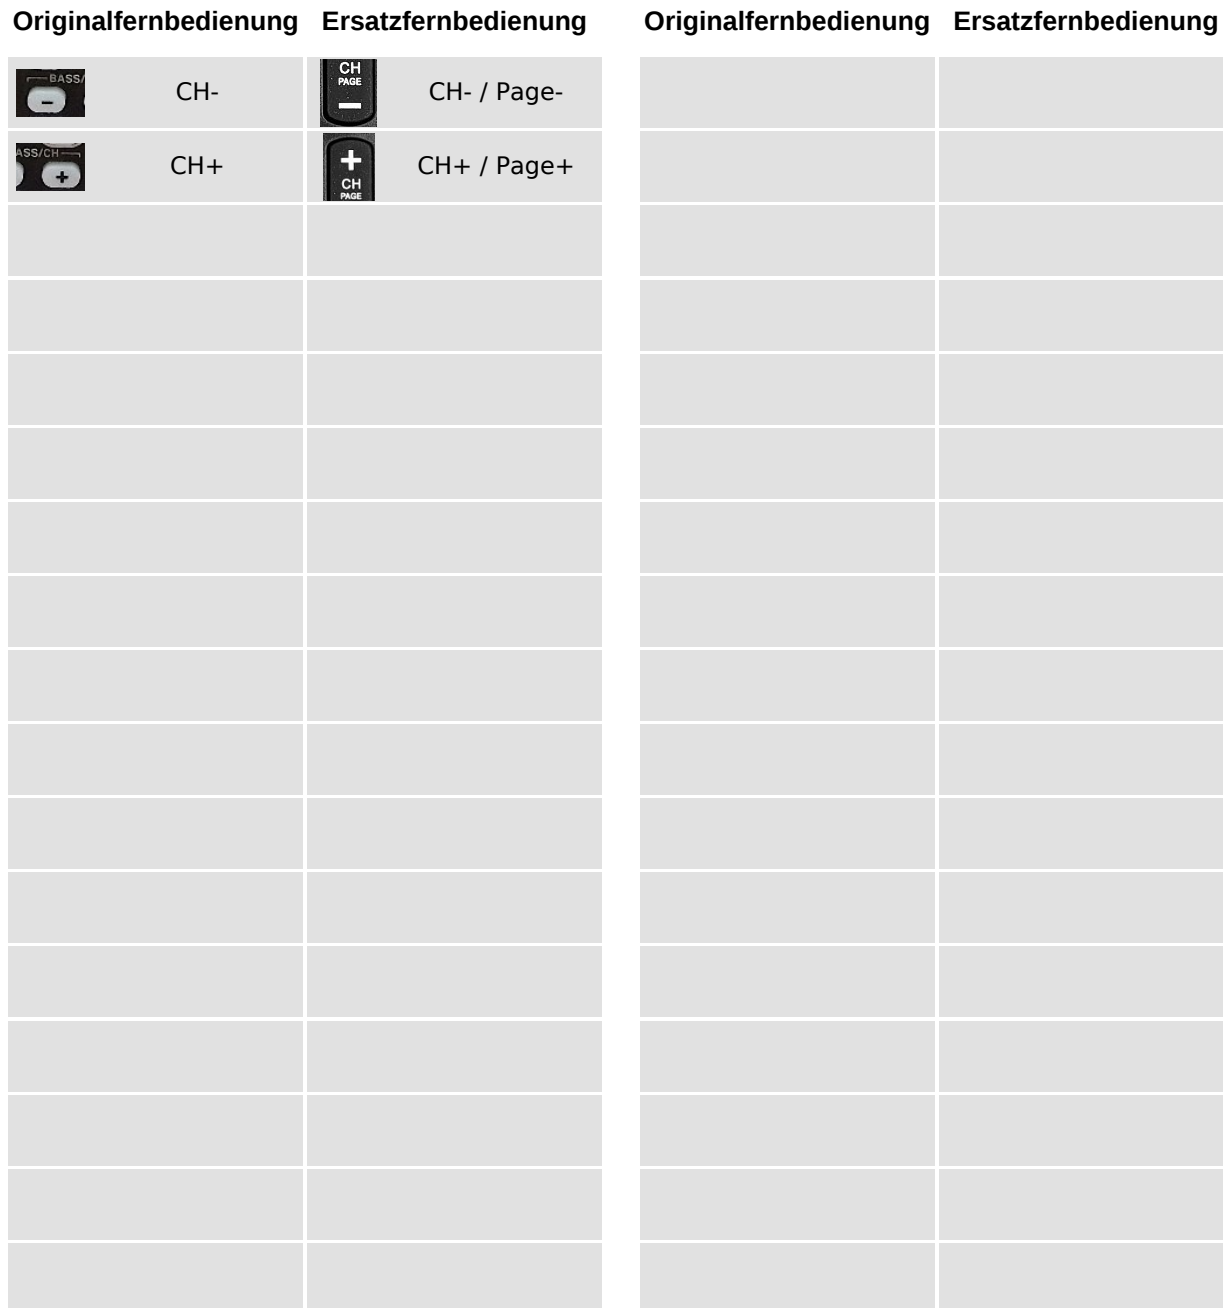  



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Volume+		Vol+
	Display		Display / Media
	Volume-		Vol-
	Tune+		>> / Tune+
	Info		Info / Angle
	Preset-		I<< / Preset-
	Enter		OK
	Preset+		>>I / Preset+
	Menu		Menu / Home
	Tune-		<< / Tune-
	Memo		Smart / List
	T.Mode		Text / Goto
	P.Scan		D.Menu / Top
	Band		Setup / OPT /
	1		1

Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	CL		Exit / Cancel / Clear
	0		0
	CAT-		CH- / Page-
	CAT+		CH+ / Page+

