




 


 
 

 
 

 

 

 
 









Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Display		Display / Media
	CD		Shift + 3
	Tuner/Band		Shift + 6
	AUX		Shift + 7
	Random/Repeat		Blue / Prime Video / Random
	<</Tuning		<< / Tune-
	>>/Tuning Up		>> / Tune+
	I<</Preset		I<< / Preset-
	>>I/Preset Up		>>I / Preset+
	Play		Play / Slow
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Memory		OK
	1		1
	Clear		Exit / Cancel / Clear
	2		2

Originalfernbedienung Ersatzfernbedienung

	3		3
	Clock		TV/Radio /
	4		4
	Timer		Shift + Sleep / Timer
	5		5
	Sleep		Sleep / Timer
	6		6
	7		7
	8		8
	9		9
	Shift		Smart / List
	0		0
	+10		Guide / EPG / -/-
	Bass/Treble		Audio / Lang I/II
	Volume-		Vol-
	Volume+		Vol+

