





























Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|---------------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | i |  | Info / Angle |
|  | 0/AV |  | 0 |
|  | Mute |  | Mute / Dimmer |
|  | Up |  | Up |
|  | P+ |  | CH+ / Page+ |
|  | Right |  | Right |
|  | Vol+ |  | Vol+ |


Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|-----------------------------|
|  | Vol- |  | Vol- |
|  | Left |  | Left |
|  | OK |  | OK |
|  | P- |  | CH- / Page- |
|  | Down |  | Down |
|  | A/B |  | Shift + Yellow / YouTube / |
|  | TXT |  | Text / Goto |
|  | Red/Picture |  | Red / Netflix / Search |
|  | Green/Timer |  | Green / APP / Repeat |
|  | Yellow/Format |  | Yellow / YouTube / Repeat |
|  | Blue/Audio |  | Blue / Prime Video / Random |
|  | Peri |  | Smart / List |
|  | Brightness/DX- |  | I<< / Preset- |
|  | Brightness/DX+ |  | >>I / Preset+ |































Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|---------------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | i |  | Info / Angle |
|  | 0/AV |  | 0 |
|  | Mute |  | Mute / Dimmer |
|  | Up |  | Up |
|  | P+ |  | CH+ / Page+ |
|  | Right |  | Right |
|  | Vol+ |  | Vol+ |





















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|-----------------------------|
|  | Left |  | Left |
|  | Vol- |  | Vol- |
|  | OK |  | OK |
|  | Down |  | Down |
|  | P- |  | CH- / Page- |
|  | A/B |  | Shift + Yellow / YouTube / |
|  | TXT |  | Text / Goto |
|  | Red/Picture |  | Red / Netflix / Search |
|  | Green/Timer |  | Green / APP / Repeat |
|  | Yellow/Format |  | Yellow / YouTube / Repeat |
|  | Blue/Audio |  | Blue / Prime Video / Random |
|  | Brightness/DX- |  | I<< / Preset- |
|  | Brightness/DX+ |  | >>I / Preset+ |





Originalfernbedienung Ersatzfernbedienung


| | | | |
|---|-------|---|---------------------------|
|  | Power |  | Power |
|  | Rec |  | Rec / Rec Mode |
|  | Stop |  | Stop / Hold |
|  | Pause |  | Pause / Step / Freeze |
|  | P+ |  | CH+ / Page+ |
|  | >> |  | >> / Tune+ |
|  | << |  | << / Tune- |
|  | Play |  | Play / Slow |
|  | P- |  | CH- / Page- |
|  | A/B |  | Yellow / YouTube / Repeat |
|  | TXT |  | Text / Goto |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung





























| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|---------------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | i |  | Info / Angle |
|  | 0/AV |  | 0 |
|  | Mute |  | Mute / Dimmer |
|  | Up |  | Up |
|  | P+ |  | CH+ / Page+ |
|  | Right |  | Right |
|  | Vol+ |  | Vol+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|-----------------------------|
|  | Left |  | Left |
|  | Vol- |  | Vol- |
|  | OK |  | OK |
|  | Down |  | Down |
|  | P- |  | CH- / Page- |
|  | A/B |  | Shift + Yellow / YouTube / |
|  | TXT |  | Text / Goto |
|  | Red/Picture |  | Red / Netflix / Search |
|  | Green/Timer |  | Green / APP / Repeat |
|  | Yellow/Format |  | Yellow / YouTube / Repeat |
|  | Blue/Audio |  | Blue / Prime Video / Random |
|  | Peri |  | Smart / List |
|  | Brightness/DX- |  | I<< / Preset- |
|  | Brightness/DX+ |  | >>I / Preset+ |

