






















 









 

 








 





Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	OSD		Display / Media
	Clear		Exit / Cancel / Clear
	Open/Close		Eject / Surround
	Goto		Text / Goto
	Step		Shift + Pause / Step /
	Prog		TV/Radio /
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	Language		Audio / Lang I/II
	4		4
	5		5
	6		6
	Subtitle		Subtitle / EQ
	7		7









 





Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	Zoom		Zoom / Size
	0/10		0
	10+		Guide / EPG / -/-
	A-B		Yellow / YouTube / Repeat
	Title		Sound / Title
	Return		Back / Return
	Repeat		Green / APP / Repeat
	Menu		Menu / Home
	Vol+		Vol+
	Angle		Info / Angle
	USB		Shift + 8
	Slow		Shift + Play /
	Vol-		Vol-
	Setup		Setup / OPT /
	Up		Up





Originalfernbedienung Ersatzfernbedienung

	L/R		Sleep / Timer
	Left		Left
	Enter		OK
	Right		Right
	V-Mode		Picture / Format
	Down		Down
	Reset		Blue / Prime Video / Random
	N/P		Smart / List
	PBC		AV / Input / RDS
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

