




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute / Dimmer
	Info		Info / Angle
	Pause		Pause / Step / Freeze
	Menu		Menu / Home
	EPG		Guide / EPG / -/--
	Exit		Exit / Cancel / Clear
	Up		Up
	CH+		CH+ / Page+
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	CH-		CH- / Page-
	Down		Down
	Favorite		Fav / Marker / PC







Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	Game		Display / Media
	4		4
	5		5
	6		6
	Recall		Back / Return
	7		7
	8		8
	9		9
	0		0
	Tv/Radio		TV/Radio /
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Text		Text / Goto
	Red		Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

