







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
AUX	AUX		7
COAX	COAX		2
AUDIO-IN	Audio In		Audio / Lang I / II
OPTICAL	Optical		Zoom / Size
	Bass+		Up
	Vol+		Vol+
	Treble+		CH+ / Page+
	Bass-		Down
	Vol-		Vol-
	Treble-		CH- / Page-
	Mute		Mute / Dimmer
SURR	SURR		TV/Radio /

**Originalfernbedienung    Ersatzfernbedienung**