

 
 


 




 



 

 

 



 

 

 

















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Advance		Subtitle / EQ
	Open/Close		Eject / Surround
	Again		Picture / Format
	Zoom		Zoom / Size
	Radio		TV/Radio /
	Live		Setup / OPT /
	Text		Text / Goto
	AV		AV / Input / RDS
	Menu		Menu / Home


 
 

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Info		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	Violet		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4

 

 











 

 



 

















Originalfernbedienung Ersatzfernbedienung



 
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Advance		Subtitle / EQ
	Open/Close		Eject / Surround
	Again		Picture / Format
	Zoom		Zoom / Size
	Radio		TV/Radio /
	Live		Setup / OPT /
	Text		Text / Goto
	AV		AV / Input / RDS
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung



 







 



 

 

 

 

 











	Up		Up
	Info		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	Violet		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Advance		Subtitle / EQ
	Open/Close		Eject / Surround
	Again		Picture / Format
	Zoom		Zoom / Size
	Radio		TV/Radio /
	Live		Setup / OPT /
	Text		Text / Goto
	AV		AV / Input / RDS
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Info		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	Violet		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4



