





 

 

 

 



 



 

 







 

 





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	T		Display / Media
	0		0
	List		Smart / List
	Vol+		Vol+
	Info		Info / Angle
	P+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Setup		Setup / OPT /
	P-		CH- / Page-
	Home		Shift + Menu /
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Input		AV / Input / RDS
	Exit		Exit / Cancel / Clear
	Guide		Guide / EPG / -/-
	Text		Text / Goto
	Lang		Audio / Lang I/II
	Subt.		Subtitle / EQ





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Zoom		Zoom / Size
	Play		Play / Slow
	Stop		Stop / Hold
	Netflix		Shift + Red / Netflix /
	Prime Video		Shift + Blue / Prime

