





































Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	PP		Back / Return
	I / II		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Fav / Marker / PC
	P<P		Display / Media
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Info		Info / Angle
	Left		Left
	Up / P +		Up
	Up / P +		CH+ / Page+
	Right		Right
	Down / P -		Down
	Down / P -		CH- / Page-
	Vol -		Vol-
	Vol +		Vol+
	Red / Sound		Red / Netflix / Search
	Green / Picture		Green / APP / Repeat
	Yellow / Feature		Yellow / YouTube / Repeat
	Blue / Install		Blue / Prime Video / Random
	TV		TV/Radio /
	AV		AV / Input / RDS
	Text		Text / Goto
	Mix		Shift + Text / Goto



Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung



Originalfernbedienung	Ersatzfernbedienung
	TIMER SLEEP Sleep / Timer
	HOLD Stop / Hold
	CLEAR EXIT CANCEL Exit / Cancel / Clear
	SIZE ZOOM Zoom / Size
	FORMAT PICTURE Picture / Format
	OK OK

Originalfernbedienung	Ersatzfernbedienung

