


 










 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Media		Shift + Display / Media
	Aspect		Zoom / Size
	PMode		Picture / Format
	SMode		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0

Originalfernbedienung Ersatzfernbedienung

	Recall		Back / Return
	Display		Display / Media
	Eject		Eject / Surround
	Rec		Rec / Rec Mode
	Red/Program		Red / Netflix / Search
	Green/Info		Green / APP / Repeat
	Yellow/Goto		Yellow / YouTube / Repeat
	Blue/AB		Blue / Prime Video / Random
	Sleep		Sleep / Timer
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit/DVD Setup		Exit / Cancel / Clear









Originalfernbedienung Ersatzfernbedienung

	CH+		CH+ / Page+
	Subtitle		Subtitle / EQ
	Vol+		Vol+
	CH-		CH- / Page-
	T.Shift/Angle		Info / Angle
	Vol-		Vol-
	Play/Hold		Play / Slow
	Pause		Pause / Step / Freeze
	<</Reveal		<< / Tune-
	>>/Size		>> / Tune+
	Stop/Index		Stop / Hold
	I<<		I<< / Preset-
	>>/S.Page		>>I / Preset+
	Text/Zoom		Text / Goto
	FAV/DVD Menu		Fav / Marker / PC
	Audio		Audio / Lang I/II
	DTV		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

	EPG/Title		Guide / EPG / -/--
	Tv/Radio		TV/Radio /

