




 



 



 




















Originalfernbedienung Ersatzfernbedienung

 Power / Standby	 Power
 TV / Radio	 TV/Radio /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Subtitle	 Subtitle / EQ
 Text	 Text / Goto
 Hold	 Shift + Hold / Stop /
 TVG	 Guide / EPG / -/--
 Audio	 Audio / Lang I/II
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Size	 Size / Tune-
 Size	 Zoom / Size
 Subpage	 >> / Tune+
 Rec	 Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

 Stop	 Stop / Hold
 I<< / FAV	 I<< / Preset-
 I<< / FAV	 Fav / Marker / PC
 >>I / Index	 >>I / Preset+
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Aspect	 Picture / Format
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-





Originalfernbedienung Ersatzfernbedienung

	Display		Display / Media
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return

Originalfernbedienung Ersatzfernbedienung

