






 








Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|----------------|-------------------------------------------------------------------------------------|--------------------|
|  | Power |  | Power |
|  | CBL/SAT |  | 0 |
|  | Media Player |  | Guide / EPG / -/-- |
|  | Blu-ray/DVD |  | 2 |
|  | Game |  | Fav / Marker / PC |
|  | AUX |  | 7 |
|  | Tuner |  | 6 |
|  | Phono |  | 5 |
|  | TV Audio |  | 1 |
|  | CD |  | 3 |
|  | USB |  | 8 |
|  | Bluetooth |  | 9 |
|  | Internet Radio |  | 4 |
|  | Heos |  | Smart / List |
|  | CH+ |  | CH+ / Page+ |
|  | ECO |  | Zoom / Size |
|  | Volume+ |  | Vol+ |











 









Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|------------|---------------------------------------------------------------------------------------|---------------|
|  | CH- |  | CH- / Page- |
|  | Mute |  | Mute / Dimmer |
|  | Volume- |  | Vol- |
|  | Info |  | Info / Angle |
|  | Option |  | Menu / Home |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Back |  | Back / Return |
|  | Down |  | Down |
|  | Setup |  | Setup / OPT / |
|  | I<</Tune- |  | I<< / Preset- |
|  | I<</Tune- |  | << / Tune- |
|  | Play/Pause |  | Play / Slow |
|  | >>I/Tune+ |  | >>I / Preset+ |
|  | >>I/Tune+ |  | >> / Tune+ |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|----------------|-------------------------------------------------------------------------------------|--------------------|
|  | Power |  | Power |
|  | CBL/SAT |  | 0 |
|  | Media Player |  | Guide / EPG / -/-- |
|  | Blu-ray/DVD |  | 2 |
|  | Game |  | Fav / Marker / PC |
|  | AUX |  | 7 |
|  | Tuner |  | 6 |
|  | Phono |  | 5 |
|  | TV Audio |  | 1 |
|  | CD |  | 3 |
|  | USB |  | 8 |
|  | Bluetooth |  | 9 |
|  | Internet Radio |  | 4 |
|  | Heos |  | Smart / List |
|  | CH+ |  | CH+ / Page+ |
|  | Volume+ |  | Vol+ |
|  | CH- |  | CH- / Page- |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|----------------|---------------------------------------------------------------------------------------|------------------------|
|  | Mute |  | Mute / Dimmer |
|  | Volume- |  | Vol- |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Back |  | Back / Return |
|  | Down |  | Down |
|  | I<</Tune- |  | I<< / Preset- |
|  | I<</Tune- |  | << / Tune- |
|  | Play/Pause |  | Play / Slow |
|  | >>I/Tune+ |  | >>I / Preset+ |
|  | >>I/Tune+ |  | >> / Tune+ |
|  | Band |  | Display / Media |
|  | Stop/Mode |  | Stop / Hold |
|  | Memory |  | Eject / Surround |
|  | Smart Select 1 |  | Red / Netflix / Search |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------------|--|-----------------------------|
| | Smart Select 2 | | Green / APP / Repeat |
| | Smart Select 3 | | Yellow / YouTube / Repeat |
| | Smart Select 4 | | Blue / Prime Video / Random |
| | Sleep | | Sleep / Timer |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

