











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sub-T		Subtitle / EQ
	Lang		Audio / Lang I/II
	Mute		Mute / Dimmer
	EPG		Guide / EPG / -/-
	Goto		Shift + Text /
	Page+		CH+ / Page+
	TTX		Text / Goto
	Repeat		Shift + Green / APP /
	Page-		CH- / Page-
	Menu		Menu / Home
	Up/CH+		Up
	Exit		Exit / Cancel / Clear
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	FAV		Fav / Marker / PC
	Down/CH-		Down
	Tv/Radio		TV/Radio /
	1		1
	2		2
	3		3
	Recall		Back / Return
	4		4
	5		5
	6		6
	Info		Info / Angle
	7		7
	8		8
	9		9
	0		0
	<<		<< / Tune-





Originalfernbedienung Ersatzfernbedienung

	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Play		Play / Slow
	Pause/Time Shift		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Red/PVR		Red / Netflix / Search
	Green/V-Format		Green / APP / Repeat
	Yellow/Aspect		Yellow / YouTube / Repeat
	Blue/Timer		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

