



Originalfernbedienung Ersatzfernbedienung

	Power CD		Power
	Open/Close		Eject / Surround
	Power AMP		Shift + Power
	CD		Shift + 3
	Tuner		Shift + 6
	Recorder		Shift + 2
	Optical 1		Shift + 4
	Optical 2		Shift + 5
	Coaxial		Shift + 1
	Phono		Shift + 7
	Network		Shift + 8
	I<<		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Input		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	Tone/Balance		Smart / List
	Volume+ AMP		Vol+
	Info		Info / Angle
	Mute AMP		Mute / Dimmer
	Volume- AMP		Vol-
	Program		TV/Radio /
	Option		Shift + Setup / OPT / Tools
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Setup		Setup / OPT /
	1		1
	2		2
	3		3





Originalfernbedienung Ersatzfernbedienung

4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI - SAT 0	0
a / A	a/A	GUIDE EPG	Guide / EPG / -/--
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
RANDOM	Random	Prime Video RANDOM	Blue / Prime Video / Random
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
DIMMER	Dimmer	SHIFT + DIMMER MUTE	Shift + Mute / Dimmer
FILTER	Filter	SIZE ZOOM	Zoom / Size

Originalfernbedienung Ersatzfernbedienung

