






 












 

 
 
 

 

 





Originalfernbedienung Ersatzfernbedienung









 
 
 


 
 

 

 

 
 
 
 
 
 
	Power		Power
	Tv/TXT		Text
	Input		AV
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5

Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	Back		Back
	FAV		Shift + Pre Ch
	Menu		Menu
	Exit		Exit
	Nicam/A2		Shift + Guide
	Display		Shift + Info
	Mute		Mute
	Picture		Format
	Sound		Dual
	Sleep		Sleep
	Subtitle		Subt
	EPG		Guide





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	CH/List		Pre Ch				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue/Screen		Blue				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	Record		Rec				
	>>/Size		>>				
	<</Hold		<<				
	Cancel		Shift + Back				
	Reveal/Rep		Eject				
	I<</Subpage		D. Menu				
	>>I/Index		Info				
	List		List				

